

Lock Replacement

Recommended Tools

- Battery-operated drill with magnetic bit
- 3/16 Drill Bit
- Rivet Gun
- Eight (8) 3/16 rivets (provided by QMI)



Steps

1.

Begin by raising the shutter curtain up.



2.

Use the battery operated drill with the 3/16 drill bit and drill out the six lock cover rivets. Then remove the cover and carefully set it aside.



3.

Next drill out the two lock rivets on the other side of the shutter.



4.

Slide the lock bars off the lock and grab one of the lock bars and remove it from the shutter curtain. This will make it easier to remove the old lock.



5.

Place the new lock in and slide the lock bar back into the shutter. Then re-attach the lock bars back onto the new lock. Make sure to put the rubber pads back over the part that connects the bar to the lock.



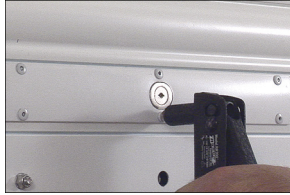
6.

Take the rivet gun and re-attach the two lock rivets that hold the lock in place.



7.

Pick up the lock cover and take a rivet gun and re-attach the six 3/16 inch lock rivets on the other side.

**9.**

When finished, take a rag and any cleaning product to clean any finger prints or dirt that may have gotten on it while it was being repaired.

**8.**

Test the lock by lowering the shutter and locking it and unlocking it.

